

FUNCTIONS SETTING

UNICANPLUS on default manage some functions.

However sometime end user prefers other functions instead of those chosen by Paser.


For this reason it was inserted a new procedure that allows to set a series of functions.

First of all it is important that the unit had recognised a car canbus protocol. So the LED must be light GREEN .




Now press 3 times the UNICANPLUS button and you will see that the LED will flash RED.

The number of flashes are to determinate which car protocol was selected by the unit.

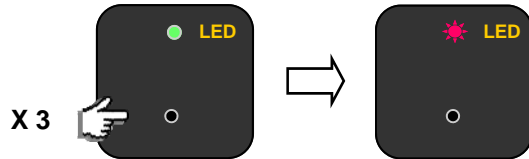

Now turn the ignition ON of the car 3 times. The LED will flash YELLOW with intervals of 1 flash and one pause.


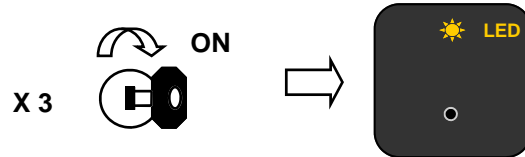


The number of the flash means the number of the optino we can change, by pressing quickly the il UNICANPLUS button, we will jump to the second option available and so on for all the options available (5) in this UNICANPLUS version. If we need to **change** the default state of an option, press for a long the unit button till the LED, after a quick switch off, will light GREEN fix.

OPTION AND FLASH NUMBERS	DEFAULT	OPTION
1	SEEK ALWAYS AVAILABLE	SEEK AVAILABLE FOR 10 SEC AFTER A VOLUME PRESS
2	BRAKEHAND AVAILABLE WHEN HANDBRAKE IS ON	ODOMETRIC HANDBRAKE AVAILABLE WHEN THE CAR IS UNDER 3 Km/h OF SPEED
3	SEEK ALWAYS AVAILABLE	ODOMETRIC SEEK AVAILABLE WHEN THE CAR IS OVER 3 Km/h OF SPEED
4	SPEED PULSE FREQUENCY 26000 PULSE PER MILE	SPEED PULSE FREQUENCY 4000 PULSE PER MILE
5	SEEK ALWAYS AVAILABLE	SEEK AVAILABLE IN AUDIO MENU (Mercedes-Volkswagen)
6 ONLY FOR KENWOOD	PHONE BUTTONS AVAILABLE	PHONE BUTTONS NOT AVAILABLE
7	PARKING SENSOR BUZZER SIGNAL DISABLED	PARKING SENSOR BUZZER SIGNAL ENABLED ON HANDBRAKE OUTPUT
8	AMPLIWAKE UP ON	AMPLIWAKE UP OFF
9	RESISTIVE RADIO CODE IMPULSED	RESISTIVE RADIO CODE CONTINUOUS
10	IGNITION INTERRUPTED WHEN KEY IS OFF (ONLY JEEP GRAND CHEROKEE)	IGNITION INTERRUPTED WHEN KEY IS PULLED OUT (ONLY JEEP GRAND CHEROKEE)
11	HANDBRAKE OUTPUT	FIAT BLUE&ME MUTE ON THE HANDBRAKE OUTPUT

Set profile 7

Connect a buzzer as below described

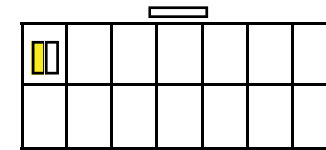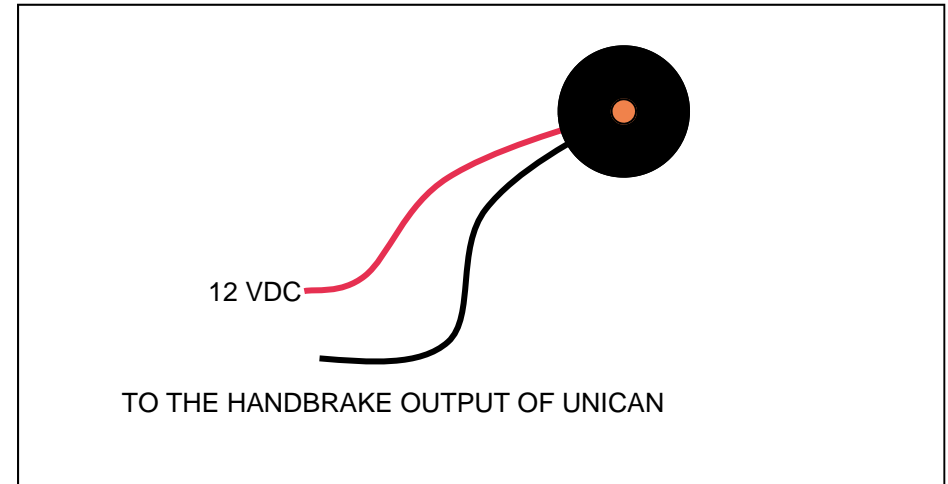

**UNICAN CONNECTOR EXIT WIRES VIEW,
CONNECT THE BLACK WIRE OF THE BUZZER TOGETHER THE
YELLOW WHITE**