

# KENWOOD

## KCA-RC405

REMOTE CONTROL UNIT

### INSTRUCTION MANUAL

TELECOMMANDE

### MODE D'EMPLOI

FERNBEDIENUNG

### BEDIENUNGSANLEITUNG

AFSTANDSBEDIENING

### GEBRUIKSAANWIJZING

TELECOMANDO

### ISTRUZIONI PER L'USO

UNIDAD DE CONTROL REMOTO

### MANUAL DE INSTRUCCIONES

ПУЛЬТ ДИСТАНЦИОННОГО УПРАВЛЕНИЯ

### ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

遥控器

### 使用说明书

وحدة التحكم عن بُعد

### دليل التشغيل

Kenwood Corporation



Изделие изготовлено в Малайзии  
© B64-4634-00/00 (W)

# Function and Operation for KCA-RC405

## General control

- Volume control: [VOL]
- Source select: [SRC]
- Volume reduce: [ATT]  
When the button is pressed again, the volume returns to the previous level.
- Return to previous item: [↶]
- Exit from mode: [EXIT]
- Selection of item: [▲]/[▼]
- Determination: [ENT]
- Enter Audio Control mode: [AUD]

## In Tuner/HD Radio™ (USA only) source

- Band select: [FM]/[AM]
- Station select: [◀◀]/[▶▶]
- Recall preset stations: [1] — [6]
- Enter Direct Access Tuning mode: [DIRECT]

## In CD/Audio file source

- Music select: [◀◀]/[▶▶]
- Folder select: [FM]/[AM]
- Pause/Play: [ENT]
- Enter Music Search mode: [▲]/[▼]
- Movement between folders/files during Search mode: [▲]/[▼]
- Return to previous folder: [↶]
- Enter Direct Music Search mode: [DIRECT]

## In iPod source

- Enter Music Search mode: [▲]/[▼]
- Movement between items during Search mode: [▲]/[▼]
- Return to previous item: [↶]

## In Satellite Radio tuner source (USA only)

- Band select: [FM]
- Channel select: [◀◀]/[▶▶]
- Recall preset channels: [1] — [6]
- Enter Direct Access Tuning mode: [DIRECT]

## Hands-free phone control

### Making a call

- Enter Bluetooth mode: [📞]
- Select a dialing method: [▲]/[▼] → [ENT]
- Number dial input:  
Input a digit: [0] — [9]  
Input "+": [▶▶]  
Input "#": [FM]  
Input "\*": [AM]  
Clear the entered phone number: [◀◀◀]
- Make a call: [DIRECT]

### Receiving a call

- Answer the call: [📞]

 
### Call waiting

- Answer Another Incoming Call with the Current Call Suspended: [📞]

### During a call

- End the call: [SRC]


## Preparing the remote control unit



Pull the battery sheet out from the remote control unit to the direction of the arrow.

## Changing the battery of the remote control unit

Keep on slide

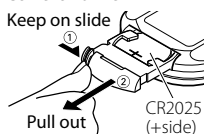

Use a commercially available button battery (CR2025). Insert the battery with the + and - poles aligned properly, following the illustration inside the case.



- This unit cannot control the function that isn't included in the car audio.

### ⚠ CAUTION

- Keep battery out of reach of children and in original package until ready to use. Dispose of used batteries promptly. If swallowed contact physician immediately.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not set the remote control in hot places such as on the dashboard.
- Danger of explosion if Lithium battery is incorrectly replaced. Replace only with the same or equivalent type.

# KCA-RC405

