

KENWOOD

KCA-RC527 KCA-RC527J

REMOTE CONTROL UNIT

INSTRUCTION MANUAL

TELECOMMANDE

MODE D'EMPLOI

FERNBEDIENUNG

BEDIENUNGSANLEITUNG

AFSTANDBEDIENING

GEBRUIKSAANWIJZING

TELECOMANDO

ISTRUZIONI PER L'USO

UNIDAD DE CONTROL REMOTO

MANUAL DE INSTRUCCIONES

リモートコントロールユニット

取扱説明書

遥控器

使用说明书

遙控器

使用説明書

리모컨 유닛

조작 매뉴얼

KENWOOD CORPORATION

Function and Operation for KCA-RC527

[SRC]

- [G] Each time the button is pressed, the source switches.

[VOL]

- [G] Adjusting the volume.
During Audio control, adjust the Audio item.*1

[ATT]

- [G] Turning the volume down quickly.
When it is pressed again, it returns to the previous level.

[*]

- [G] Adjusting the Faceplate Angle.

[AUD]*1

- [G] Select the Audio item for adjustment.

[FM]/[AM]

- [T] Select the band.
- [D] Doing disc/folder forward and backward.
- [C] Fast forwards/Rewinds the tape.
When the [▶||] button is pressed, it releases.

[◀◀]/[▶▶]

- [T] Tune up or down band.
- [D] Doing track/file forward and backward.
- [C] Do <DPSS (Direct Program Search System)> or <Tape Advance>.

[0] – [9]

- [T] Press button [1] – [6] or [1] – [8] to recall preset stations.
During <Direct Access Tuning>, enter the frequency of the station.
- [D] When in <Direct Track/File Search> and <Direct Disc Search>, enter the track/file/disc number.
Press [◀◀]/[▶▶] or [FM]/[AM] button after entering the numbers.
- [C] When in <DPSS with the Remote>, enter the number of songs.

- [T] [D] Use to enter letters during SNPS/ DNPS.
Example: If "DANCE" is entered.

Character	Button	Times pressed
"D"	[3]	1
"A"	[2]	1
"N"	[6]	2
"C"	[2]	3
"E"	[3]	2

[DIRECT]/[OK]

- [T] Enters and cancels the <Direct Access Tuning> mode.
- [T] [D] During SNPS/DNPS input, stores the already input data in memory and ends the input mode.

[▶||]

- [T] Enters and cancels the <PTY (Program Type)> mode.
- [D] Each time the button is pressed, the song pauses and plays.
- [C] Plays the reverse side of the tape.

[2-ZONE]*1

- [G] Each time the button is pressed, <Dual Zone System> is turned ON and OFF.

[▲]/[▼]*1

- [G] During the <Dual Zone System> is ON, adjusts the volume of the rear channel.

CAUTION

- Do not set the remote on hot places such as above the dashboard.



- This unit cannot control the function that isn't included in the car audio.
- *1 This function can use only the model released 2005 or later. (Except for Ez500, Ez700SR, Ez900HDS.)

- [G] General operation
- [T] Tuner operation
- [D] Disc operation/ Audio file operation/ Disc changer operation
- [C] Cassette tape operation

