

# KENWOOD

## KCA-RC547

---

REMOTE CONTROL UNIT

### **INSTRUCTION MANUAL**

TELECOMMANDE

### **MODE D'EMPLOI**

FERNBEDIENUNG

### **BEDIENUNGSANLEITUNG**

AFSTANDSBEDIENING

### **GEBRUIKSAANWIJZING**

TELECOMANDO

### **ISTRUZIONI PER L'USO**

UNIDAD DE CONTROL REMOTO

### **MANUAL DE INSTRUCCIONES**

遥控器

### **使用说明书**

遙控器

### **使用說明書**

리모컨 유닛

### **조작 매뉴얼**

Kenwood Corporation

# Function and Operation for KCA-RC547

## [SRC]

- G** Each time the button is pressed, the source switches.

## [VOL]

- G** Adjusting the volume.  
During Audio control, adjust the Audio item.\*1

## [ATT]

- G** Turning the volume down quickly.  
When it is pressed again, it returns to the previous level.

## [] (Hands Free Box connected only)

- G** Enters the dialing method selection mode.  
When a call comes in, it answers the call.  
About function of the each button during dialing method selection mode, refer to the instruction manual of Bluetooth Hands Free Box.

## [AUD]\*1

- G** Select the Audio item for adjustment.

## [FM]/[AM]

- T** Select the band.
- D** Doing disc/folder forward and backward.
- C** Fast forwards/Rewinds the tape.  
When the **[▶||]** button is pressed, it releases.

## [◀◀]/[▶▶]

- T** Tune up or down band.
- D** Doing track/file forward and backward.
- C** Do <DPSS (Direct Program Search System)> or <Tape Advance>.

## [0] – [9]

- T** Press button [1] – [6] or [1] – [8] to recall preset stations.  
During <Direct Access Tuning>, enter the frequency of the station.
- D** When in <Direct Track/File Search> and <Direct Disc Search>, enter the track/file/disc number.  
Press [**◀◀**]/[**▶▶**] or [FM]/[AM] button after entering the numbers.
- C** When in <DPSS with the Remote>, enter the number of songs.

- T D** Use to enter letters during SNPS/ DNPS.  
Example: If "DANCE" is entered.

Character	Button	Times pressed
"D"	[3]	1
"A"	[2]	1
"N"	[6]	2
"C"	[2]	3
"E"	[3]	2

## [DIRECT]/[OK]

- T** Enters and cancels the <Direct Access Tuning> mode.
- T D** During SNPS/DNPS input, stores the already input data in memory and ends the input mode.

## [▶||]

- T** Enters and cancels the <PTY (Program Type)> mode.
- D** Each time the button is pressed, the song pauses and plays.
- C** Plays the reverse side of the tape.

## [2-ZONE]\*1

- G** Each time the button is pressed, <Dual Zone System> is turned ON and OFF.

## [▲]/[▼]\*1

- G** During the <Dual Zone System> is ON, adjusts the volume of the rear channel.

## CAUTION

- Do not set the remote on hot places such as above the dashboard.



- This unit cannot control the function that isn't included in the car audio.
- \*1 This function can use only the model released 2005 or later. (Except for Ez500, Ez700SR, Ez900HDS.)

- G** General operation
- T** Tuner operation
- D** Disc operation/ Audio file operation/ Disc changer operation
- C** Cassette tape operation

# KCA-RC547

