


**KENWOOD**

Listen to the Future


2-DIN CAW-1270-00

Installation manual for:  
**Saab 9.5 9 - 1997 --> 10 - 2005**

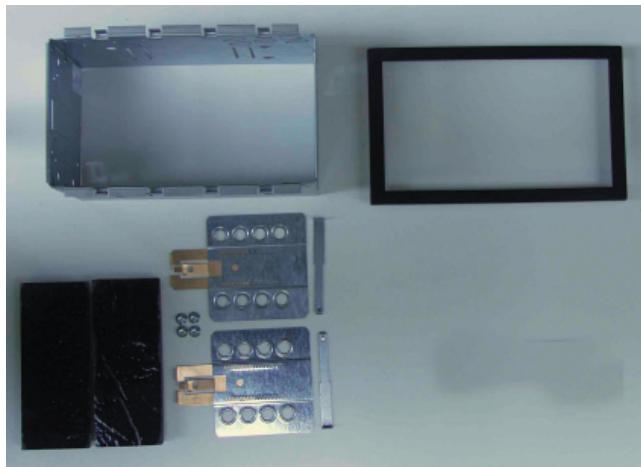

Installation kit includes the following items:



- \* 1X 2-ISO 110 mm. metal bracket
- \* 1X Replacement panel
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 2X Radio removal keys
- \* 4X Screws
- \* 2X Cushion

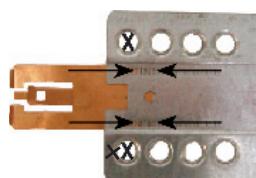

Kenwood DDX6029

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 4 & 6 marked with an arrow.  
Measured from left to right.

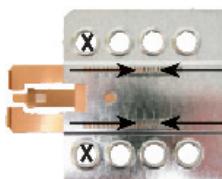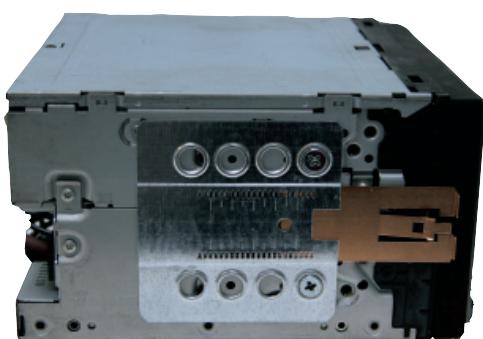

Kenwood DDX 7025

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

\* Mount the plates.



2-DIN CAW-1270-00



1 Remove radio using radio removal keys.



2 Remove the original radio bracket. At the location of the arrows. On this picture it already has been removed.



3 Place the 2-Din metal bracket.



4 Place the head unit and connect all the wiring.

Connect all of the needed wiring harnesses and check all connections carefully