

# KENWOOD

Listen to the Future


## 2-DIN CAW-1270-04

### Installation manual for: **Saab 9.7 2006--> Hummer H3 (EU)**



Installation kit includes the following items:


- \* 1X 2-ISO 100 mm. metal bracket
- \* 1X Radio trim
- \* 1X Replacement panel
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 2X Radio removal keys
- \* 4X Screws
- \* 2X Cushion

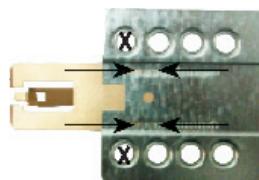

Kenwood DDX6029

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 4 & 6 marked with an arrow.  
Measured from left to right.

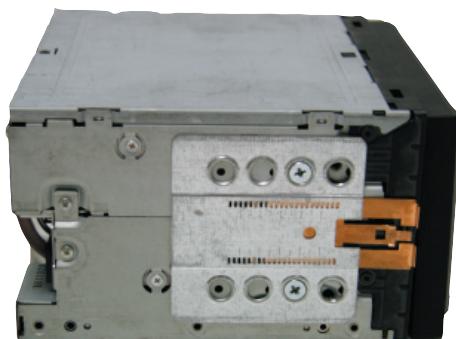

Kenwood DDX 7025

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

\* Mount the plates.

# KENWOOD 2-DIN CAW-1270-04

Listen to the Future



Remove the dashboardpanel around the radio at the location of the arrows.  
Then remove the orginal radio this is  
tighten by four screws.  
Remove the climate control unit.



Remove a piece of the plastic panel inside  
the dashboard at the location of the  
arrows.(this will give you a beter position  
of the new headunit)



Place the replacement panel.



Place the 2-Din metal bracket.  
Place the climate control unit.



Replace all panels in reversed order.



Place the new headunit and the radio  
trim.

***Connect all of the needed wiring harnesses and check the connections carefully.***