


KENWOOD

**Installation Manual**  
**Double DIN Kit**

Standard: CAW 2094-18


Rubber-Touch: CAW 2094-18-RT

- Citroën Jumper 2006→
- Fiat Ducato 2006→
- Peugeot Boxer 2006→

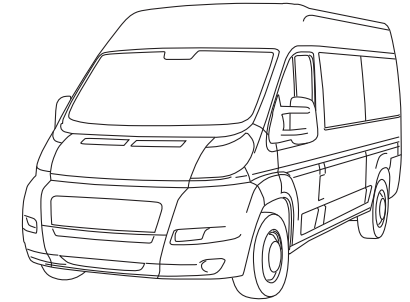

Compatible with these Kenwood double DIN devices


**Kenwood Navigation**

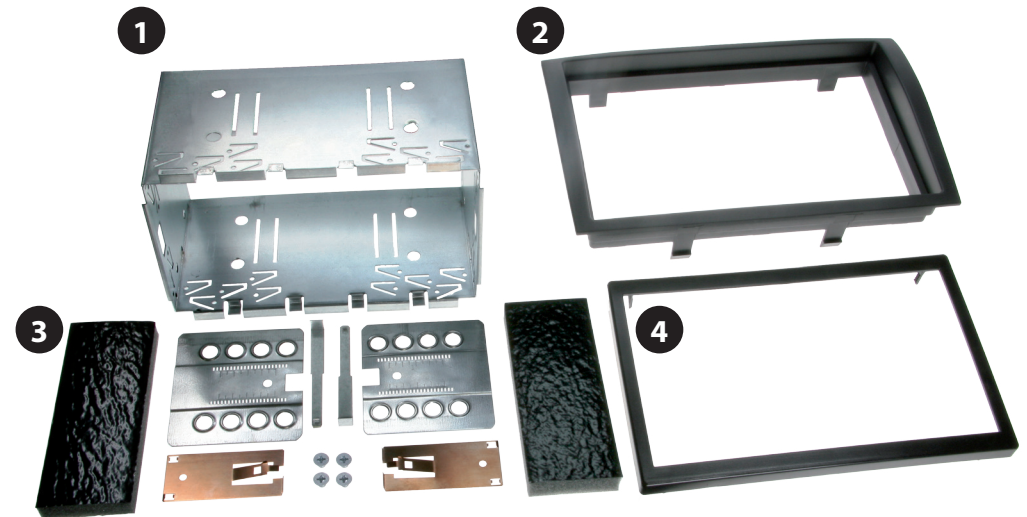

Double DIN Kit

- Metal frame (1)
- Facia plate (2)
- Installation kit (3)
- Trim frame (4)

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

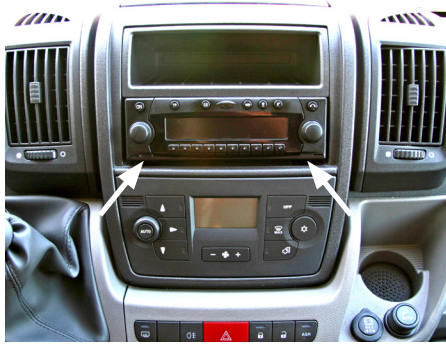

1. Remove the head unit and the pocket.


*Special tools like radio release keys may be required.*



2. Remove the original brackets (marked with arrows) with appropriate tools to clear space for the double DIN frame.




3. Place the facia plate and the metal frame on the dashboard.

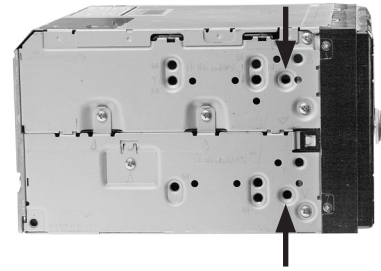

4. Mount the metal brackets with the double DIN head unit

*The position of the copper coloured holder can be adjusted to your needs (see sample photo below)*

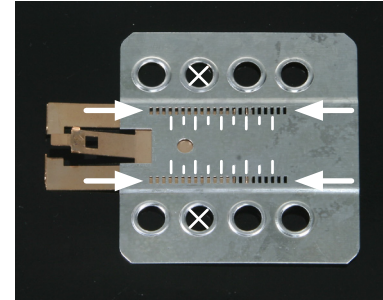

5. Connect all required circuit points and push the double DIN head unit until it snaps in.



6. Place the trim frame to finish installation.