


Honda Fit 2007→

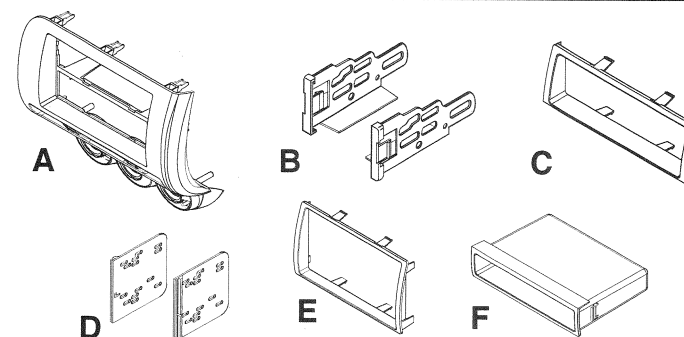

KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate • D) Double DIN Brackets
- E) Double DIN Trim Plate • F) Pocket



TOOLS REQUIRED:

- Small Flat Blade Screwdriver/ Panel Removal Tool
- Phillips Screwdriver • Socket Set



Compatible with these Kenwood double DIN devices

Kenwood Navigation

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

HONDA FIT 2007

1 Disconnect the negative battery terminal to prevent an accidental short circuit.




2 Squeeze sides of glove box then pull out and let hang to access cables behind it.

3 Unclip the (3) a/c control cables behind glove box. (Figure A)

4 Remove (1) Phillips screw from the panel on the bottom of the a/c controls then unclip and remove the panel. (Figure B)

5 Remove (2) 10 MM bolts securing center panel then unclip, unplug and remove entire assembly including climate controls. (Figure C)

NOTE: These bolts are accessed from underneath the climate controls. Figure C shows assembly already removed to show bolt location.

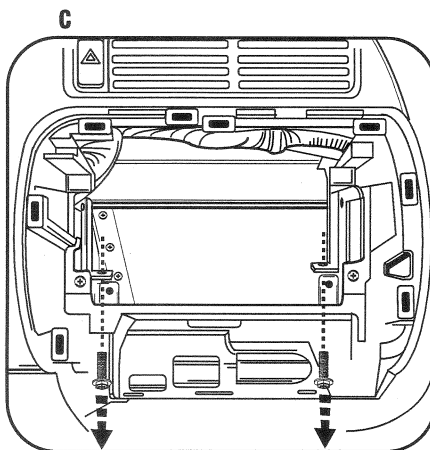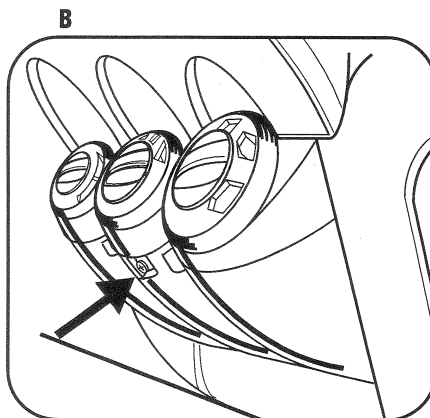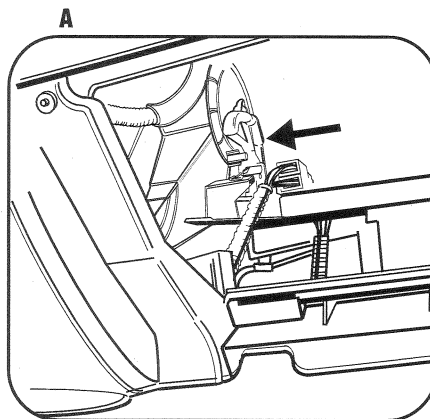




HONDA FIT 2007

6 Unclip and remove the A/C & Rear Defroster switches and the Passenger Air Bag Off Light and set them aside for use during kit assembly. (Figure D)

7 Remove (8) Phillips screws securing the climate control to the back of the factory center panel. Remove climate controls and set aside for use during kit assembly. (Figure E)

8 Remove the (7) metal retaining clips from the factory center panel and set them aside for use during kit assembly. (Figure F)




Continue to kit assembly.

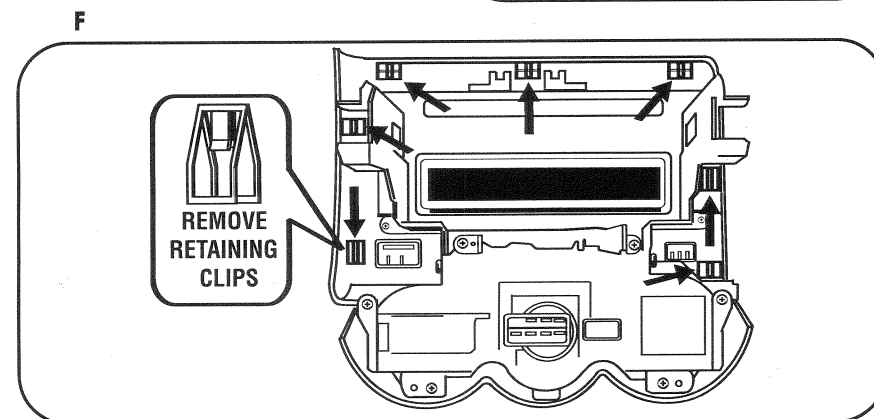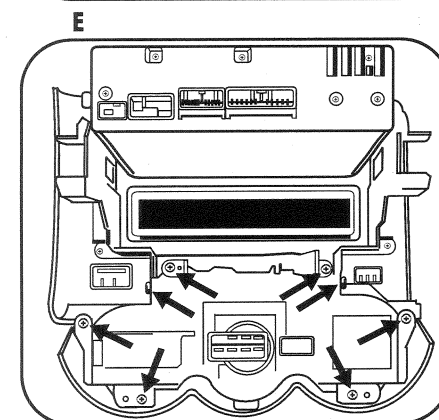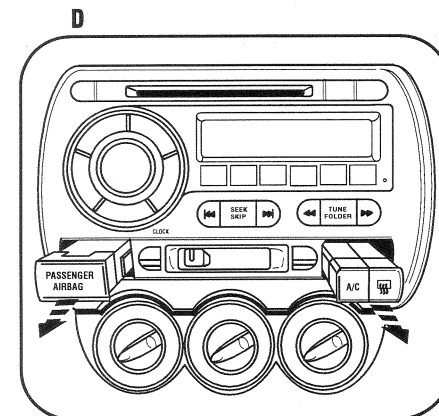

KIT PREPARATION

- 1 Secure the climate controls into the radio housing using the factory hardware. (Figure A)
- 2 Snap the A/C & Rear Defroster switches and the Passenger Air Bag Off Light into the radio housing. (Figure B)
- 3 Attach the (7) retaining clips to the radio housing in the same location as removed from the factory center panel. (Figure C)

Continue to kit assembly.

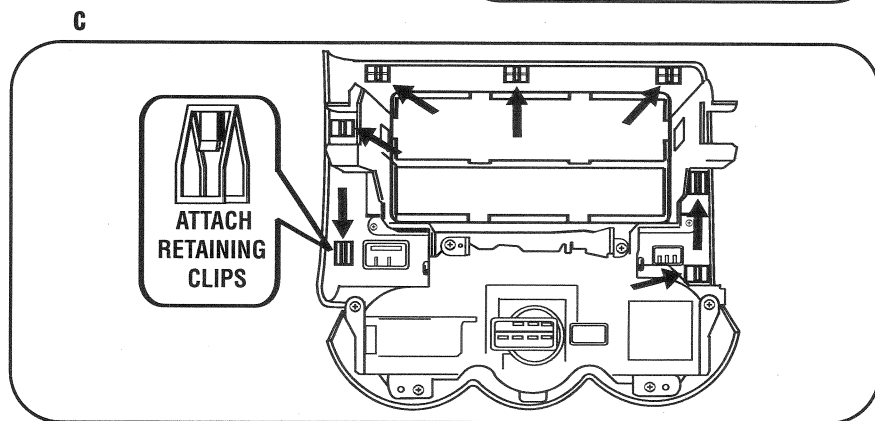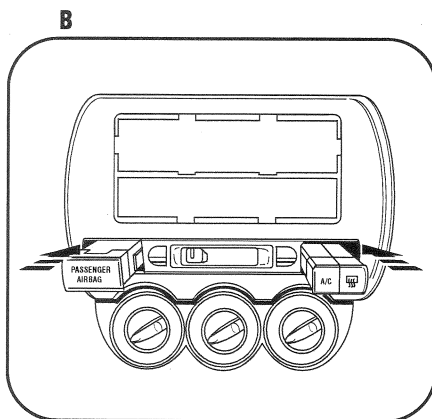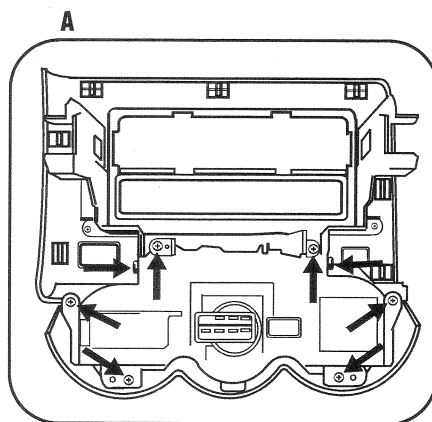

DOUBLE DIN RADIO PROVISION

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Cut and remove the center bar from the radio housing. (Figure A)
- 2 Snap the Double DIN brackets to the inside edge of the radio housing. (Figure B)
- 3 Slide the Double DIN radio into the DDIN bracket/radio housing assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure C)

- 4 Snap the Double DIN trim plate onto the front of the radio/housing assembly. (Figure C)

Continue to final assembly.

