

Installation Manual
Double DIN Kit


KENWOOD

Standard: CAW 2190-18
Rubber-Touch: CAW 2190-18-RT

- **Mercedes Sprinter (NCV 3) 2006 →**
- **Mercedes Viano / Vito (W639)**
- **Volkswagen Crafter**


Compatible with these Kenwood double DIN devices

Kenwood Navigation

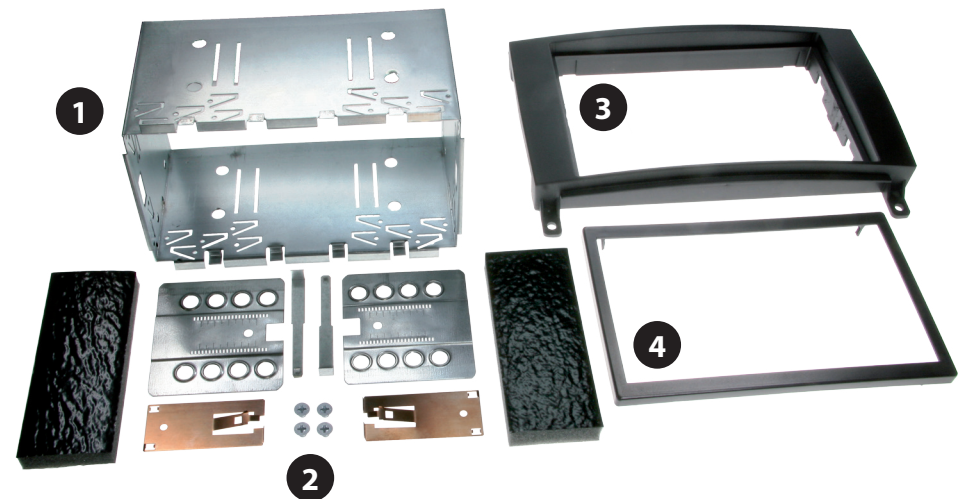


Double DIN Set contents

- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame

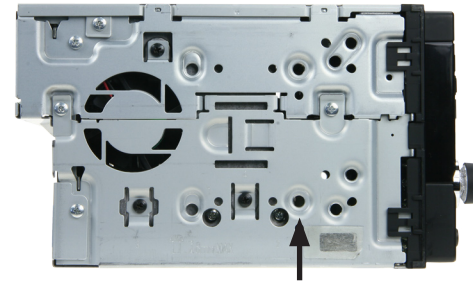

Mount the metal brackets with the double DIN head unit

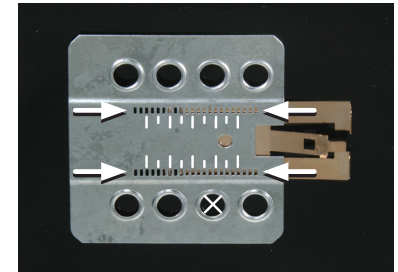

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



5. Place the fascia plate on the dashboard. Fix it with the four original screws.

Push the Metal Frame into the fascia plate.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

Mercedes Viano / Vito (W639)




1. Vehicle with OEM head unit.


Remove the trim panel surrounding the radio.




2. Remove the four screws at the top and bottom of OEM head unit.

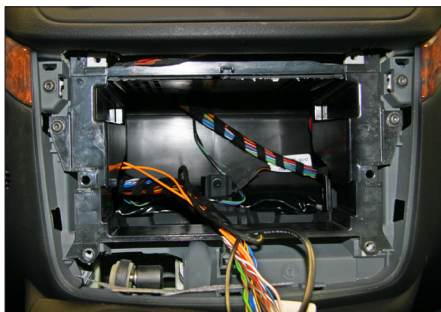

3. Remove the OEM head unit.

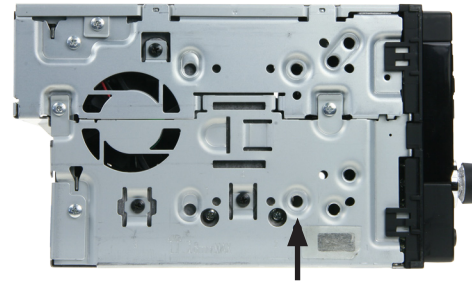

Mount the metal brackets with the double DIN head unit

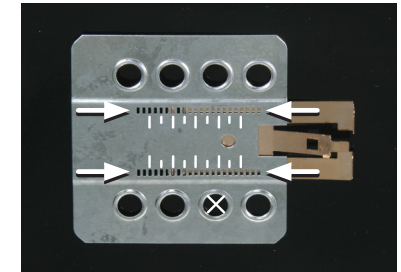

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



4. Place the fascia plate on the dashboard. Fix it with the four original screws.

Push the Metal Frame into the fascia plate.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*