


• Mercedes M-Class (W164) 2005 ➔

Compatible with these Kenwood double DIN devices


Kenwood Navigation

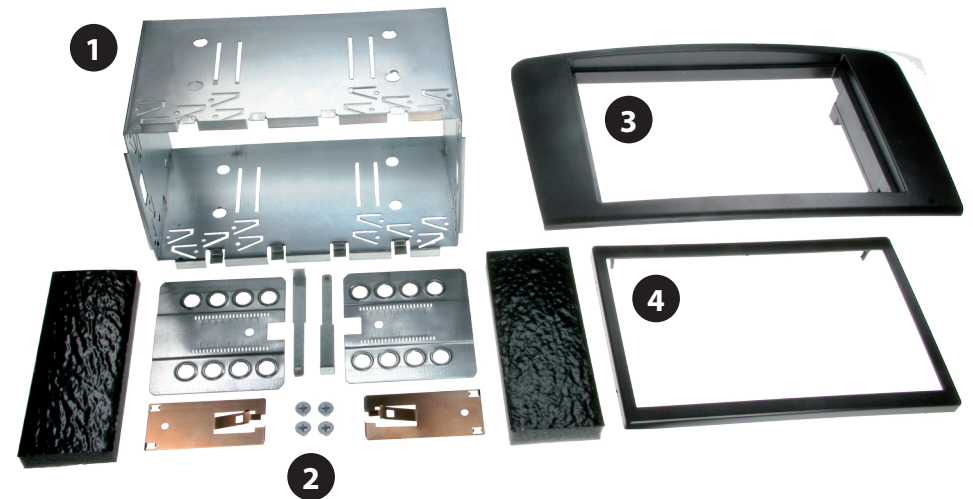

Double DIN Set contents

- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame

Installation Manual: CAW 2190-22 / CAW 2190-22-RT

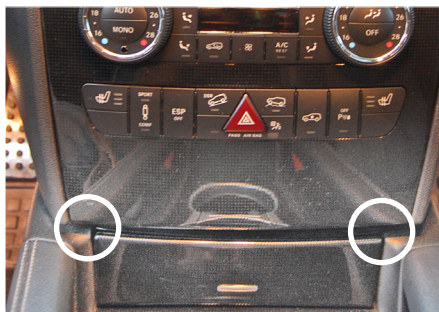

1. Open the ash tray.



Release latches of the air condition control unit below the panel (see photo) on each side by pushing it upward.

Remove air condition control unit.




2. Remove the two Torx screws below the OEM head unit.

Remove the OEM head unit.

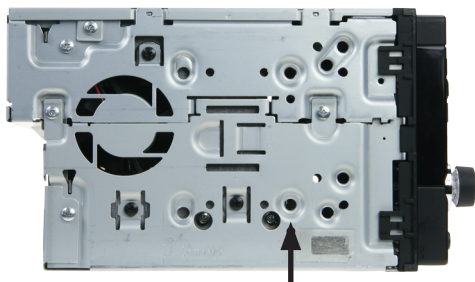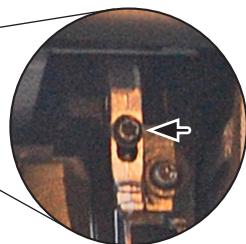

Mount the metal brackets with the double DIN head unit

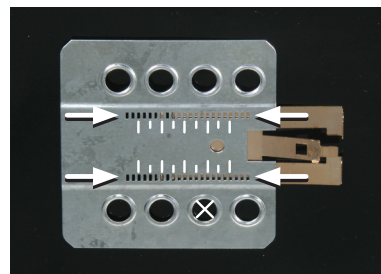

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



3. Place the fascia plate on the dashboard. Fix it with the 2 original screws.

Push the Metal Frame into the fascia plate.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*