

Installation Manual Double CAW 2275-03 / CAW 2275-03-RT



7. Place the metal bracket including the headunit.

Connect all required wires.

Place the dashboard panel, place the radio trim.

KENWOOD

Installation Manual Double DIN Kit


Standard: CAW 2275-03

Rubber-Touch: CAW 2275-03-RT

• SsangYong Actyon 2006->

Compatible with these Kenwood double DIN devices


Kenwood Navigation

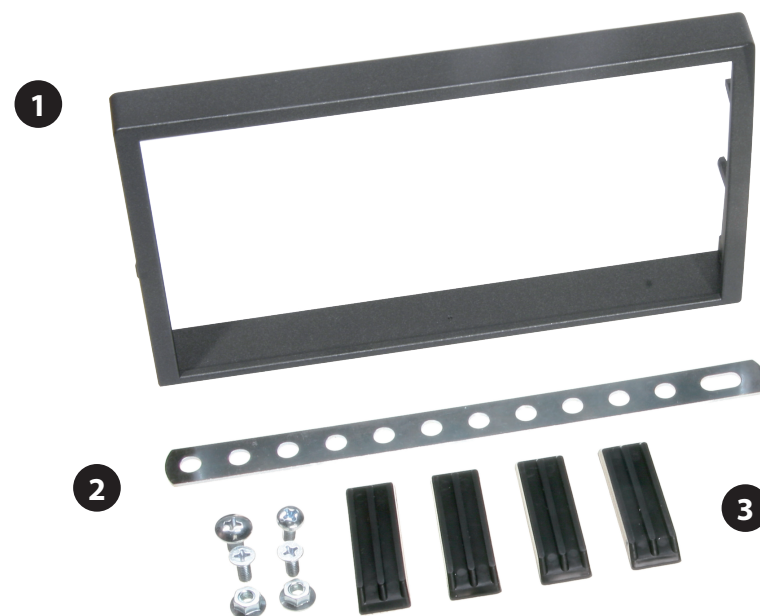


Double DIN Set contents

- (1) Trimm Plate
- (2) Metal Band
- (3) Plastic Spacers


Installation Manual Double DIN Kit CAW 2275-03 / CAW 2275-03-RT

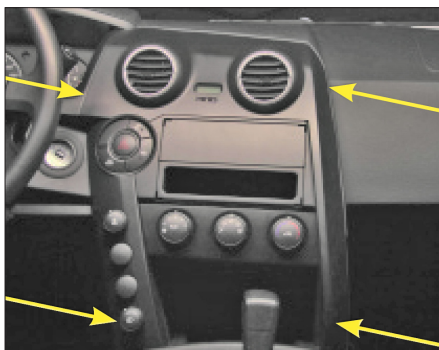

1. Remove the panel under the climate control panel.

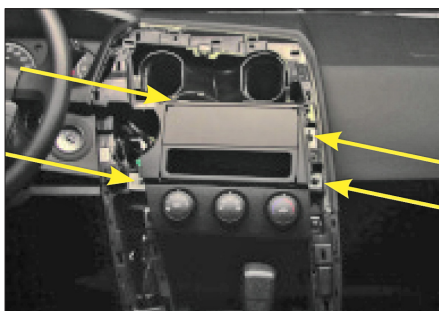


2. Remove the original bracket, which is tighten by four screws at the location of the arrows.

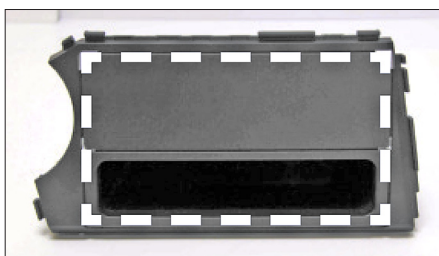

3. Remove the original plastic bracket from the metal bracket, which is tighten by four screws.


The inner plastic panel must be removed carefully.
(see white line)

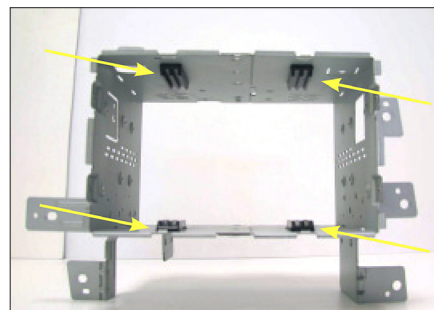


4. Place the 4 plastic spacers in the metal bracket (see arrows).



They must be placed 2 cm measured from the edges.

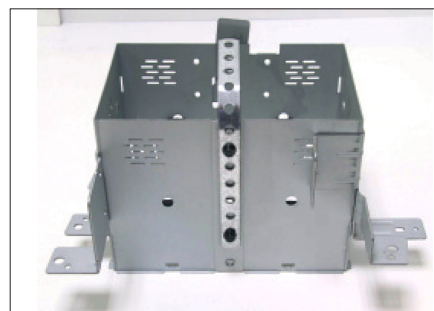

5. Mount the metal band beneath the original bracket.

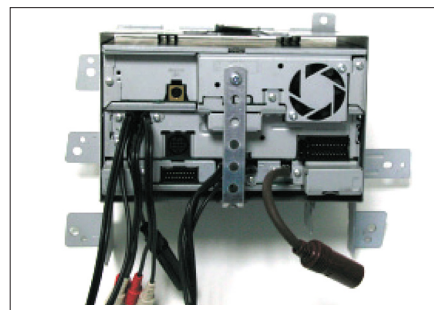

6. Tighten the headunit onto the metal band. Various positions are possible.

Choose the positions which gives the best result.