




**Installation Manual**  
**Double DIN Kit**

Standard: CAW 2300-03  
Rubber-Touch: CAW 2300-03-RT

• **Toyota RAV 4 2006** →

Compatible with these Kenwood double DIN devices

**Kenwood Navigation**

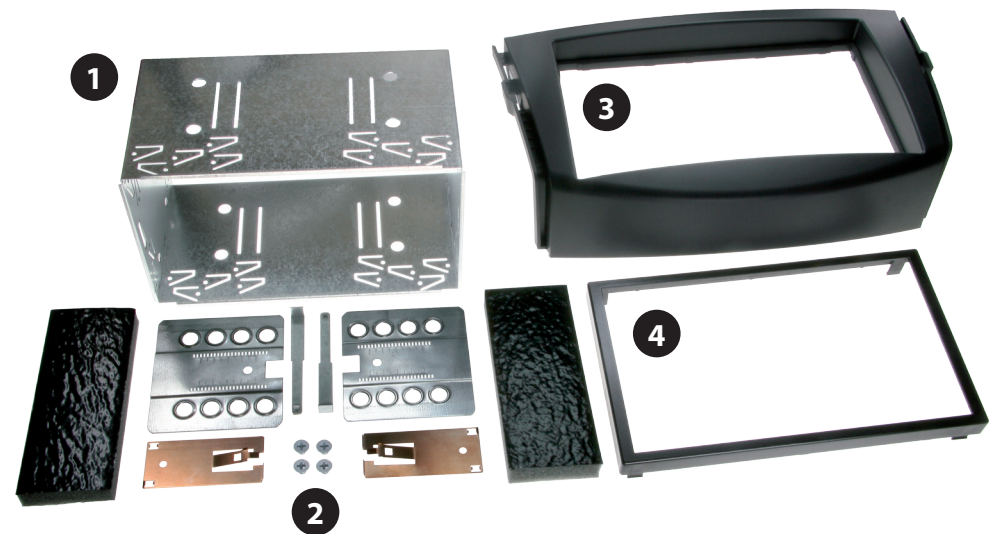


Double DIN Set contents


- (1) Metal Frame
- (2) Installation Kit
- (3) Mounting frame
- (4) Facia Plate

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*


## Installation Manual Double DIN Kit CAW 2300-03 / CAW 2300-03-RT

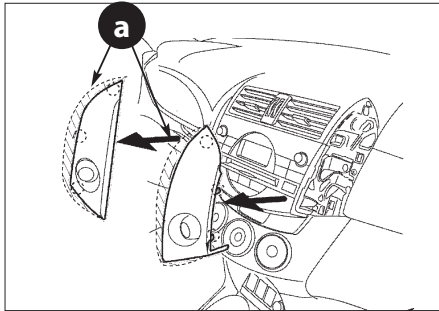


1. Remove the trim frames (a) at the left and right side carefully.

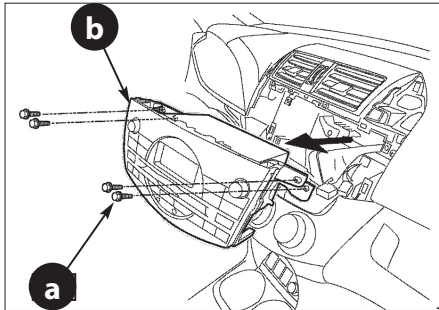

2. Remove the 4 screws (a) and remove the OEM head unit (b)

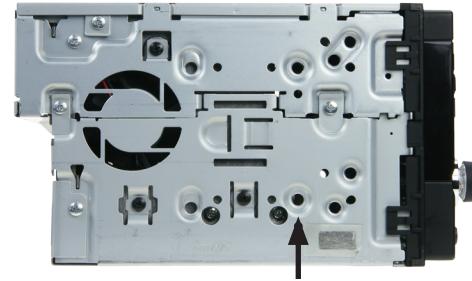

Mount the metal brackets with the double DIN head unit

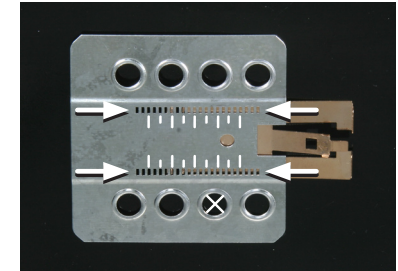

*The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)*



5. Place the fascia plate on the dashboard and fix it with the 4 original screws.

Push the metal frame into the fascia plate

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in. Place the trim frame.

Reinstall everything in reverse order to finish installation.