·····



Installation Manual Double DIN Kit

- Seat Altea 2005 →
- Seat Toledo (5P) 2005 →

Colour	Part-No. Standard	Part-No. Rubber-Touch
anthrazit-beige	CAW 2328-04	CAW 2328-04-RT
black	CAW 2328-44	CAW 2328-44-RT

Compatible with these Kenwood double DIN devices

Kenwood Navigation



Double DIN Set contents

- (1) Metal Frame
- (2) Installation Kit

- (3) Facia Plate
- (4) Trim Frame




. Vehicle with OEM head unit.



 Insert 4 radio release keys into slots on the top and bottom of the radio (see arrows)



Pull out the OEM head unit.

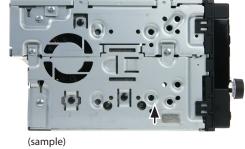

Mount the metal brackets with the double DIN head unit







(sample)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

5. Place the facia plate on the dashboard.

Push the Metal Frame into the facia plate.

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidential or indirect damages.