


KENWOOD

Listen to the Future


2-DIN CAW 1179-19

Installation manual for:
Kia Rio 2008-->

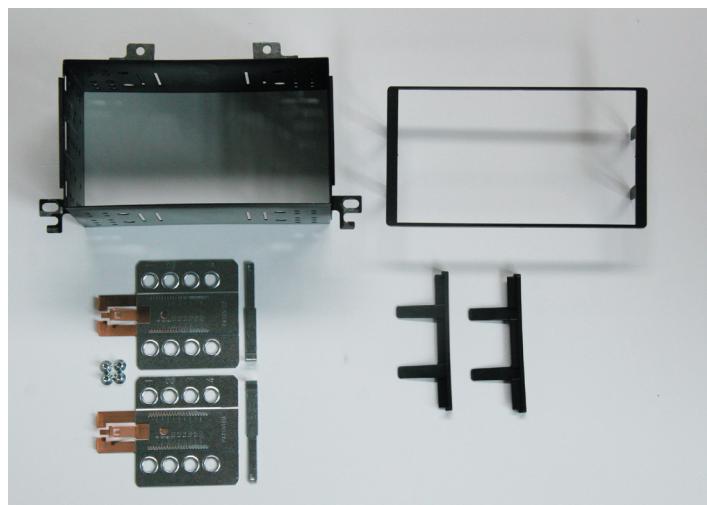

Installation kit includes the following items:


- * 1X 2-ISO 100 mm. metal bracket
- * 1X Radio trim
- * 2X Side trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws

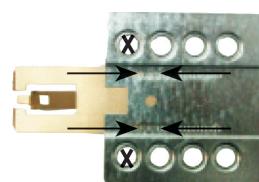

Kenwood DNX7200

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

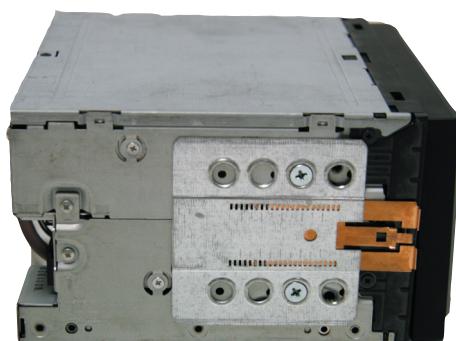

Kenwood DDX 7025

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

* Mount the plates.



Remove the panel around the original radio.



Remove the original radio and storage bin.
This is tighten by four screws



Place the 2-DIN metal bracket.



Place the new headunit.



Replace the oem panel.



Place one of the two new radio trims.
This can be different according the new headunit.

Connect all of the needed wiring harnesses and check the connections carefully.