

KENWOOD


Listen to the Future

Steering Wheel Remote Control Adaptor



CAW-PG7240

Peugeot 406 04/99-06/04



www.kenwood-europe.com

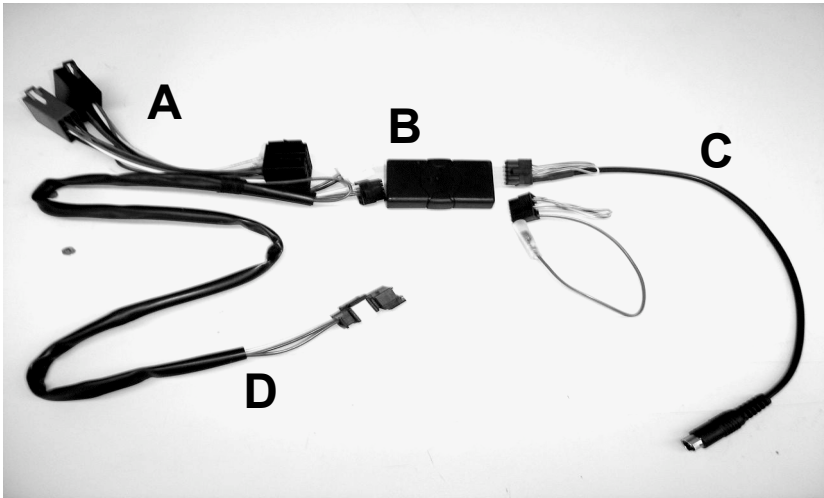


1

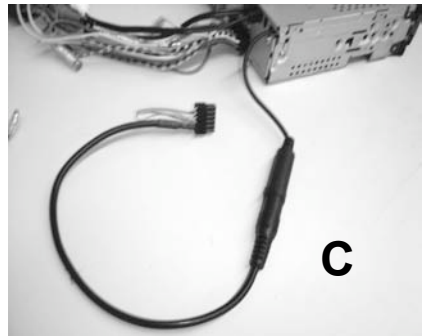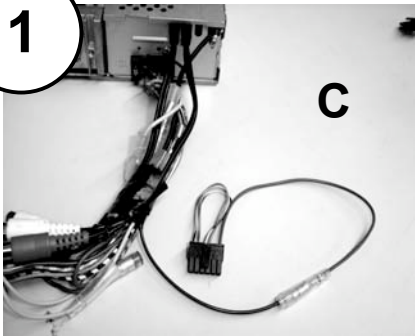


2

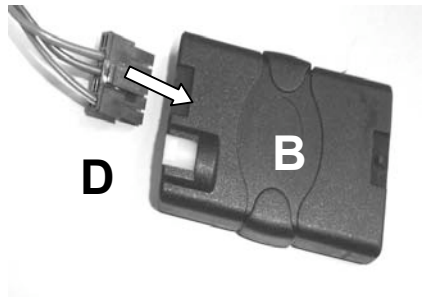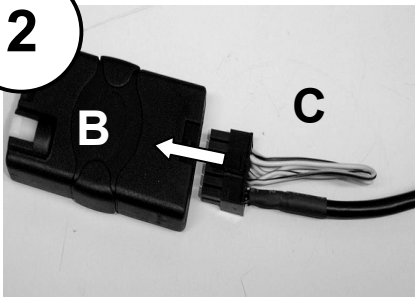

3

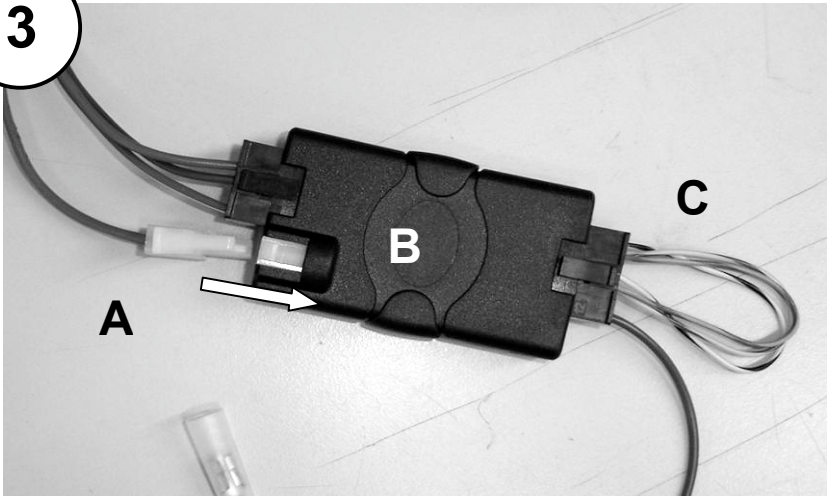


4

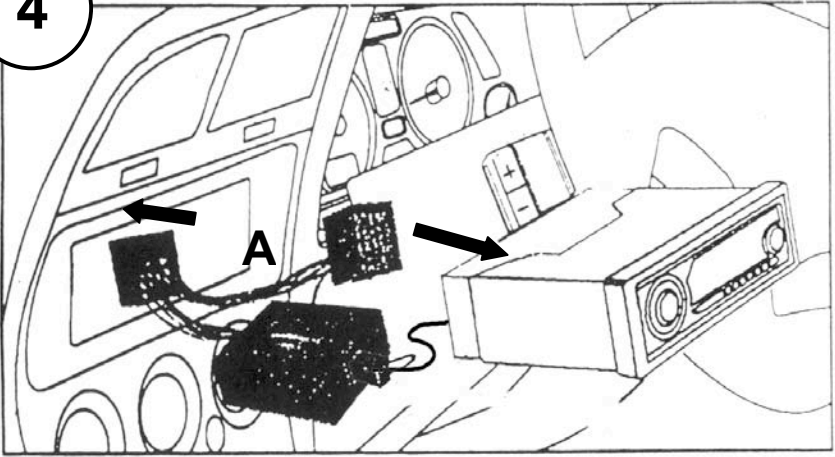

5

Remove the steering column shroud and locate the brown 4 way connector on the vehicle harness, Connect Harness D.

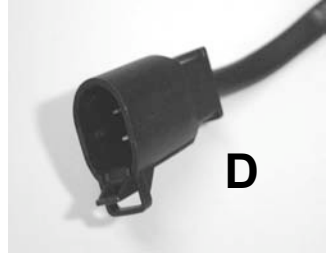

Vehicle Function	Click	Hold
Vol+	Vol+	-
Vol-	Vol-	-
—	Seek+	-
—	Seek-	-
Source	Source	
Change	Mode	

*Functions Given are a general guide, exact functionality may vary with Kenwood Model/Vehicle